

ACCESS CONTROL SYSTEM

Introduction

This guide provides a comprehensive procedure for optimising and enhancing security operations by utilising the VYROX VIP Smart Access Control System, developed by VYROX INTERNATIONAL SDN BHD. The VYROX VIP platform is a powerful and integrated suite of tools specifically designed for property managers, building administrators, and facility operators to effectively manage and monitor access to buildings, common facilities, and individual units. With features such as smart card access, biometric verification, QR code entry, and visitor management, the system ensures a secure, seamless, and user-friendly experience while strengthening overall safety and accountability within any property.

1. ACCESS CONTROL SYSTEM

An access control system is a security solution designed to regulate and monitor entry to physical or digital spaces, ensuring that only authorized individuals can gain access. By integrating technologies such as key cards, biometrics, QR codes, and password authentication, access control systems enhance safety, streamline operations, and protect valuable assets. These systems are widely used in residential buildings, commercial properties, and industrial facilities to manage the movement of people and vehicles effectively. Beyond security, access control systems also provide administrators with valuable data for monitoring activities, improving efficiency, and enforcing policies, making them an essential component of modern property and organizational management.

1.1 SuperPass-Door

Go to **Setting > AIoT Devices > SuperPASS-Door**

Settings > VYROX AIoT Devices > SuperPASS-Door

Navigation: SuperPASS-Door, SuperPASS-Lift, UltraPASS-Face, UltraPASS-Vehicle, SecurityGPT-Stranger, PrivacyCALLER, PowerMONITOR, AUTOSERVA, PayPerUse QR

Sub-navigation: Delivery Lockers, Parking Locks

Sync Date

SuperPASS-Door **New SuperPASS-Door Device**

Search: [Search] [Search] Deleted Show 50 Devices

No.	Created	Serial No.	Label
1	07-May-2025	253257130	Access Door Demo
2	14-Aug-2025	253228206	Testing Board

Showing 1 to 2 of 2 devices

Prev Next

Left sidebar menu: VIP, Operation Insights, Security Monitor (99+), Customer Accounts, Cash Book (0.00), General Ledger (2), Financial Reports, Properties, Suppliers, Settings (1)


Settings menu: AIoT Devices, Approvals, Automation, Auto Payments, Bank Details, Concierge Services, Consumption Tax Types, Contractor Service Permits, Customer Payment Verifications, Cut-off Time

Details include:

1. SuperPass-Door Controller Name
2. Number of Doors Supported
3. Label Name in Channel
4. Cloud Server
5. Cloud Server API Key
6. SuperPASS-Door Controller Serial Number


Step 1:

Fill in the blank. **“SuperPass-Door Controller Name”**

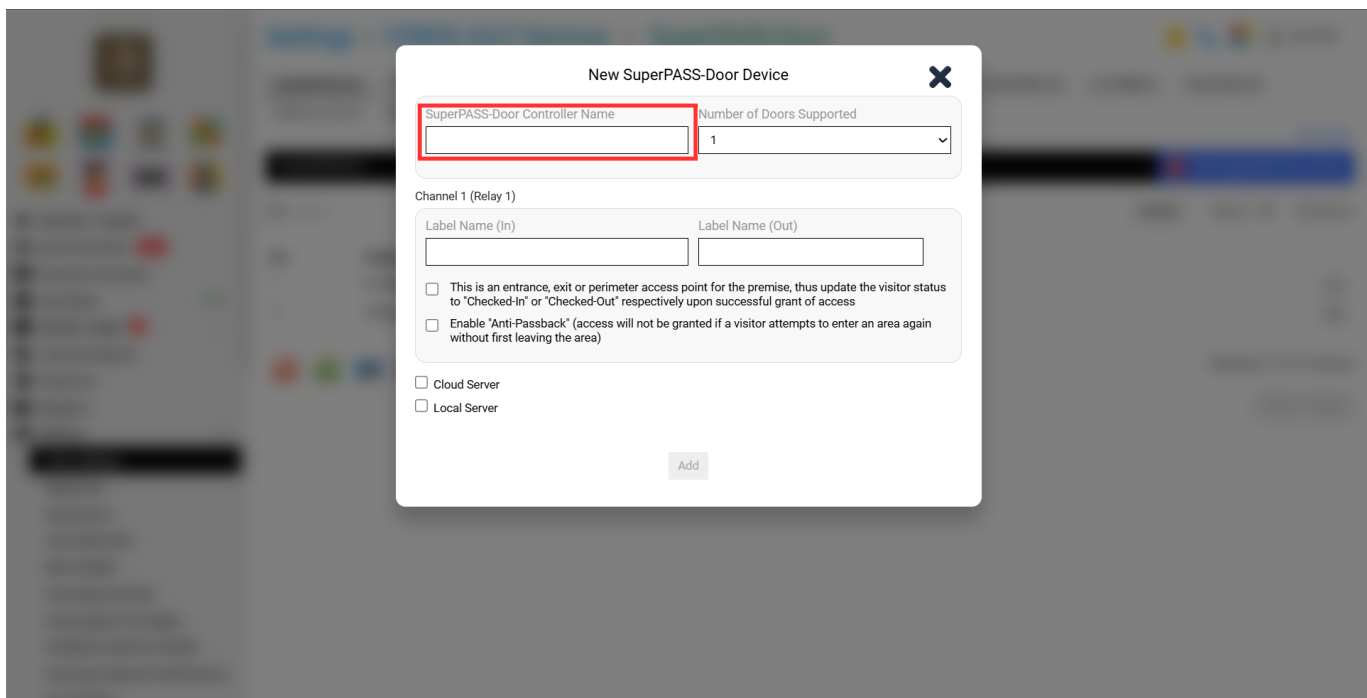


Step 2:

Select **“Number of Doors Supported”**

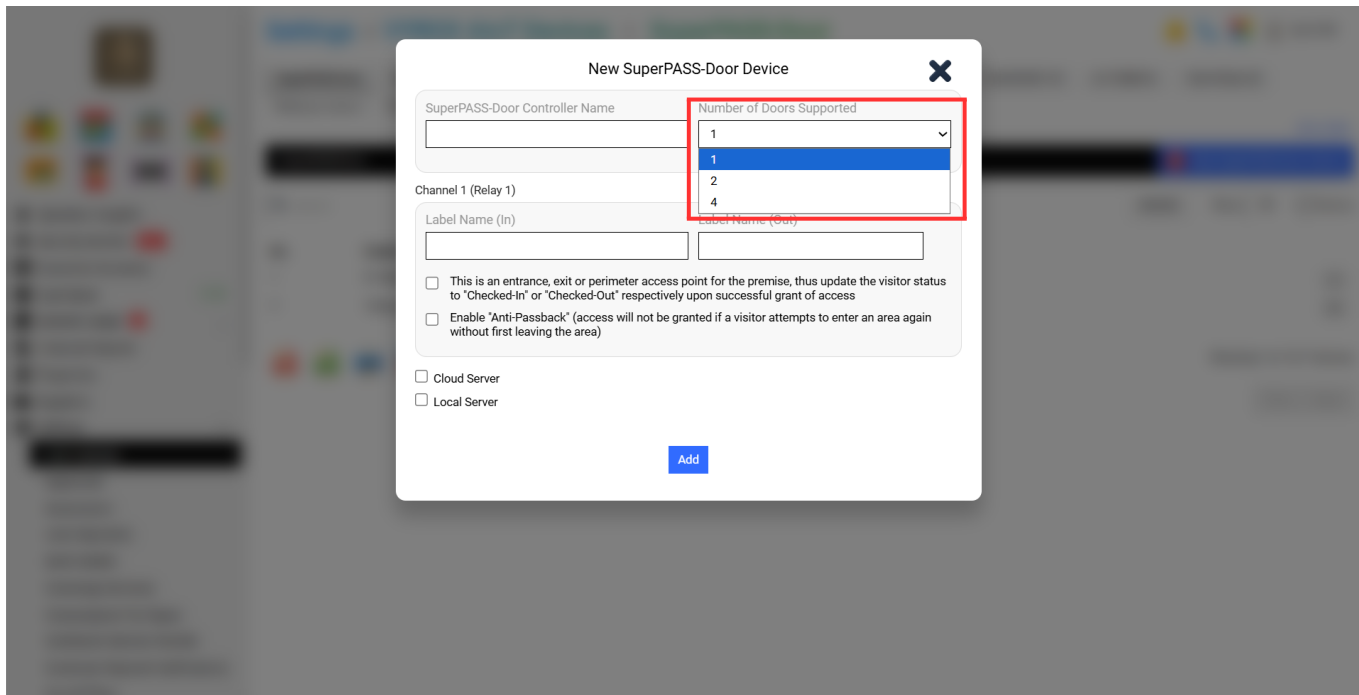


Step 3:

Fill in the Blank **“Label Name in Channel”**

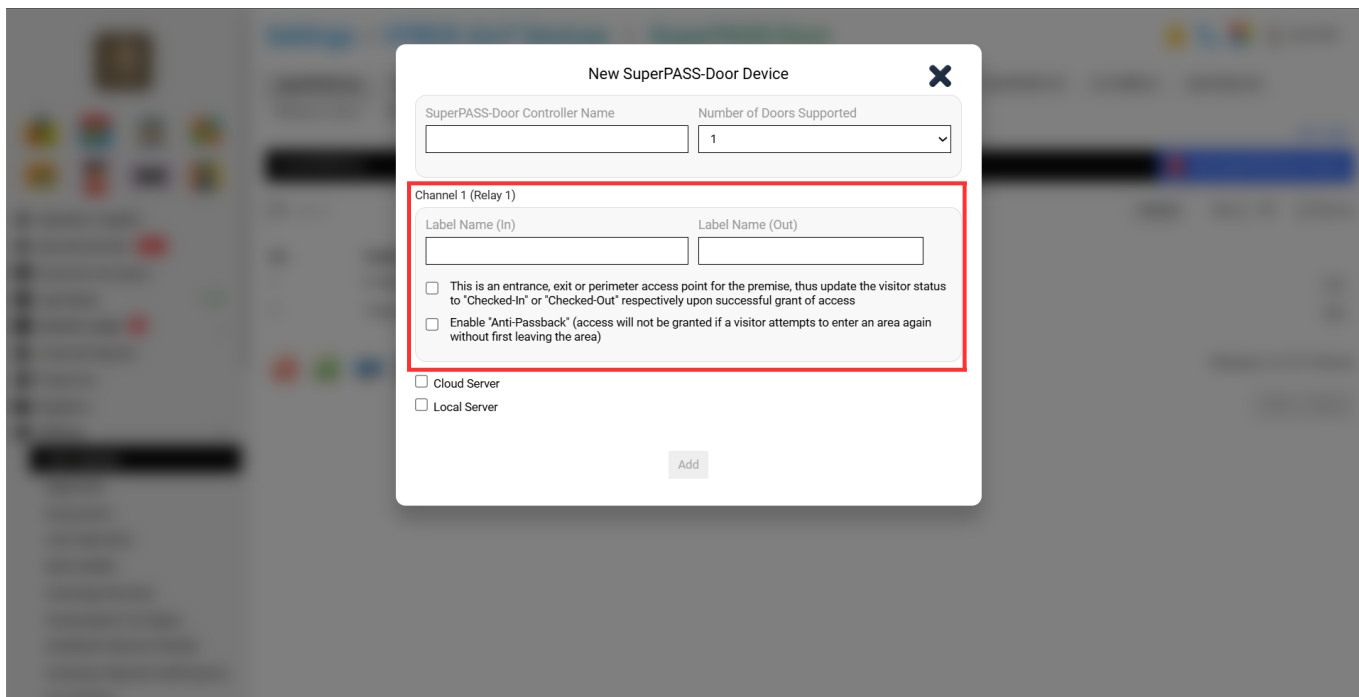


Step 4: Tick Cloud Server and Fill in the blank **“Cloud Server API Key & SuperPASS-Door Controller Serial Number”**.

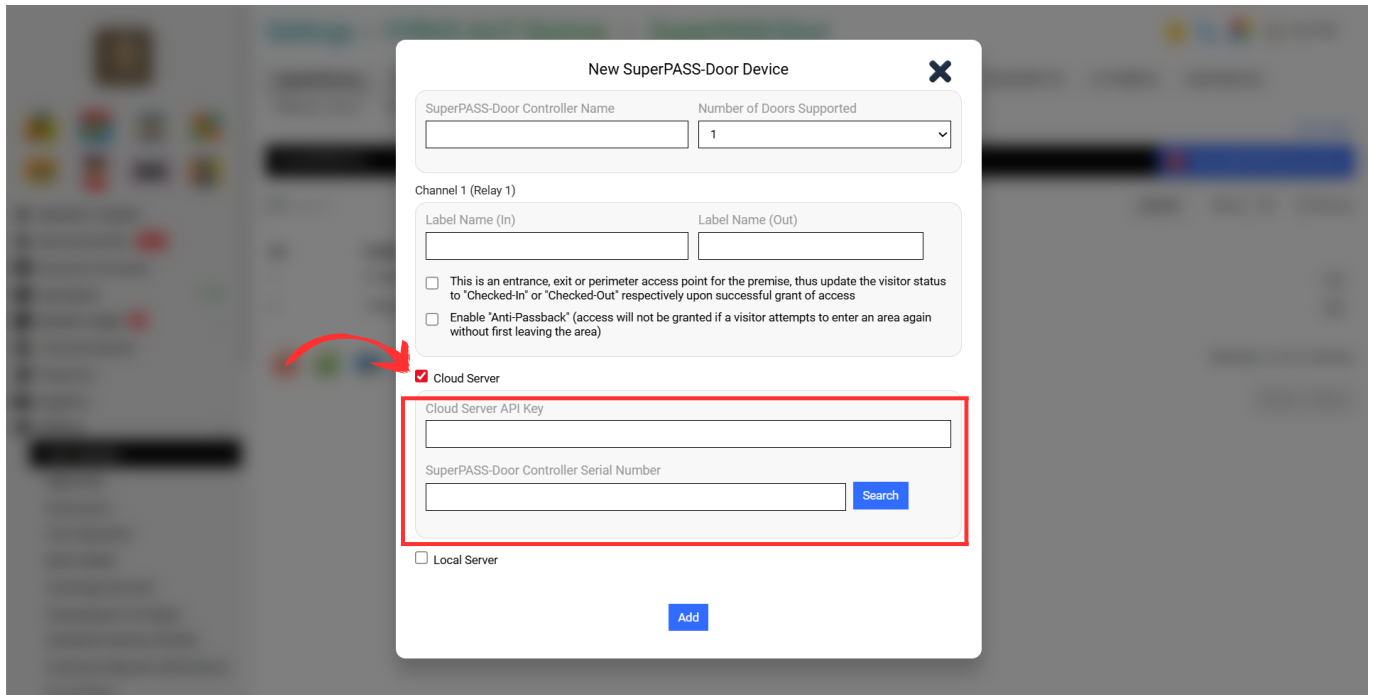

After done keying in all information, Click "Add"

1.2 SuperPass-Lift

Go to **Setting > AIoT Devices > SuperPASS-Lift**

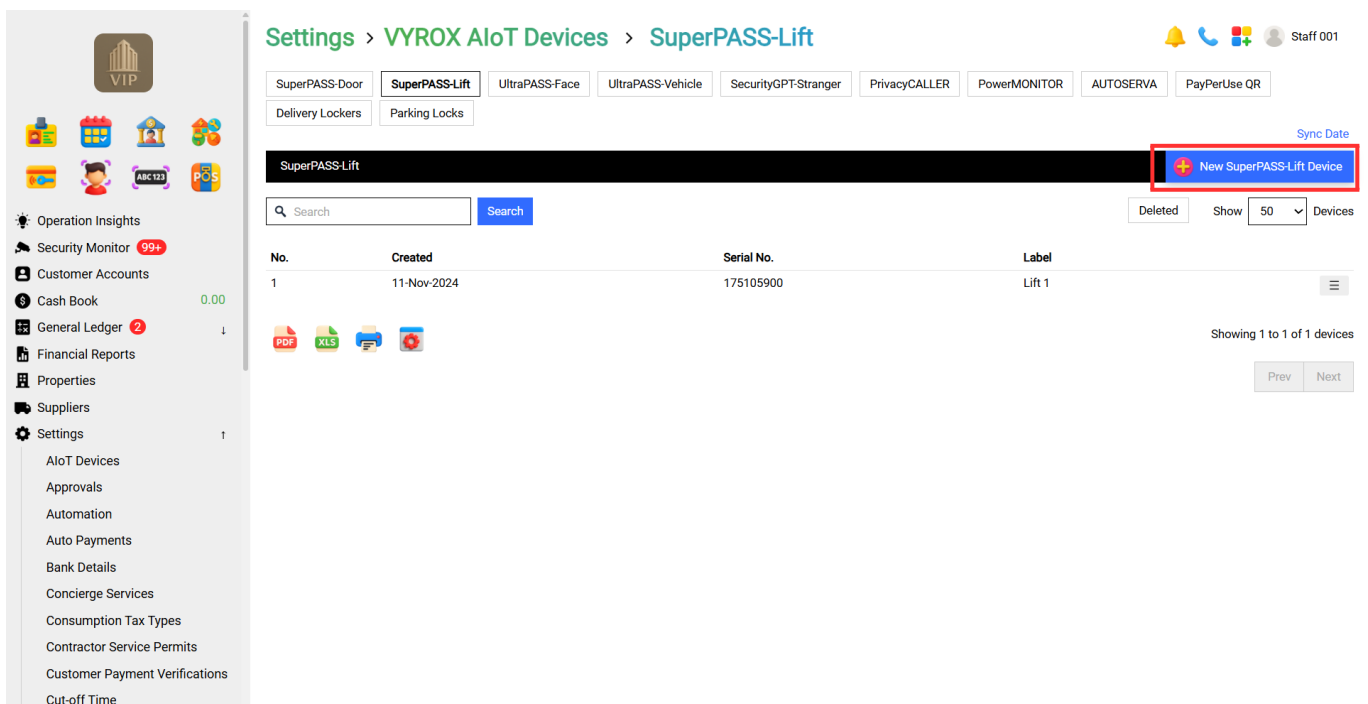


Details include:

1. SuperPass-Lift Controller Name
2. Number of Level Supported
3. Label Name in Channel
4. Cloud Server

- 5. Cloud Server API Key
- 6. SuperPASS-Lift Controller Serial Number


Step 1:

Fill in blank **“SuperPass-Lift Controller Name”**

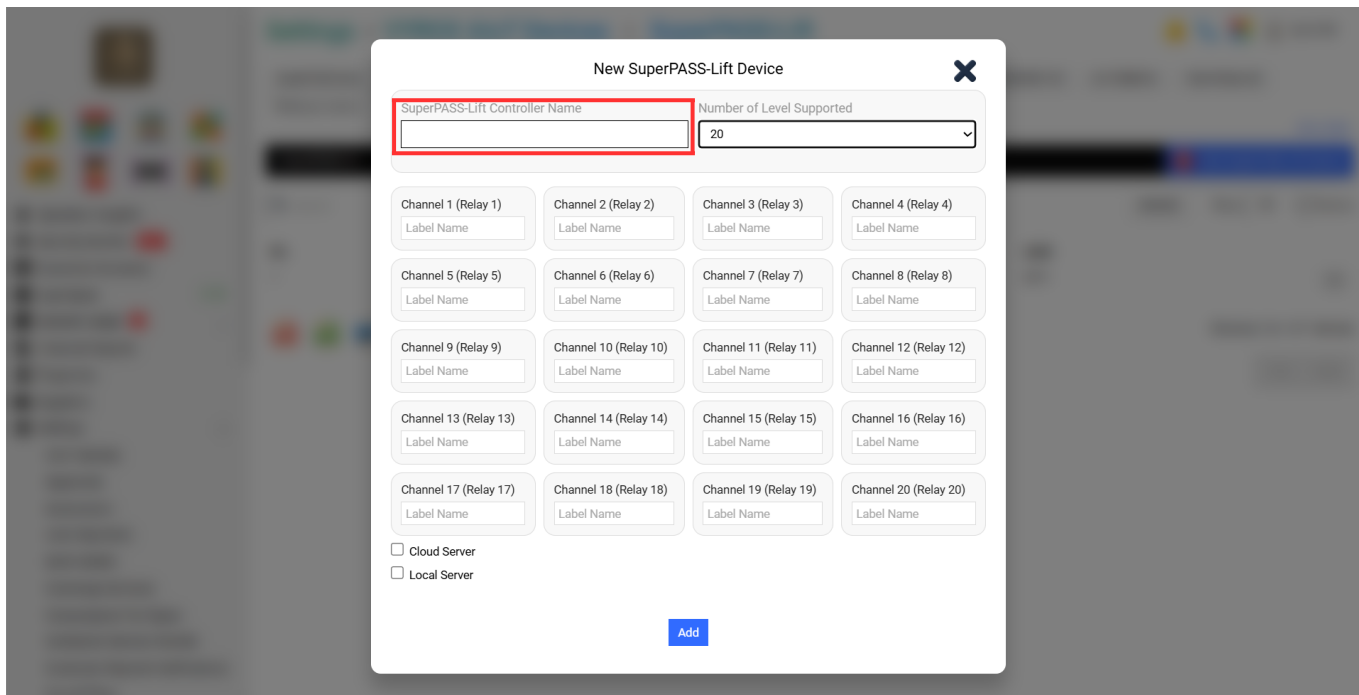


Step 2:

Select **“Number of Level Supported”**

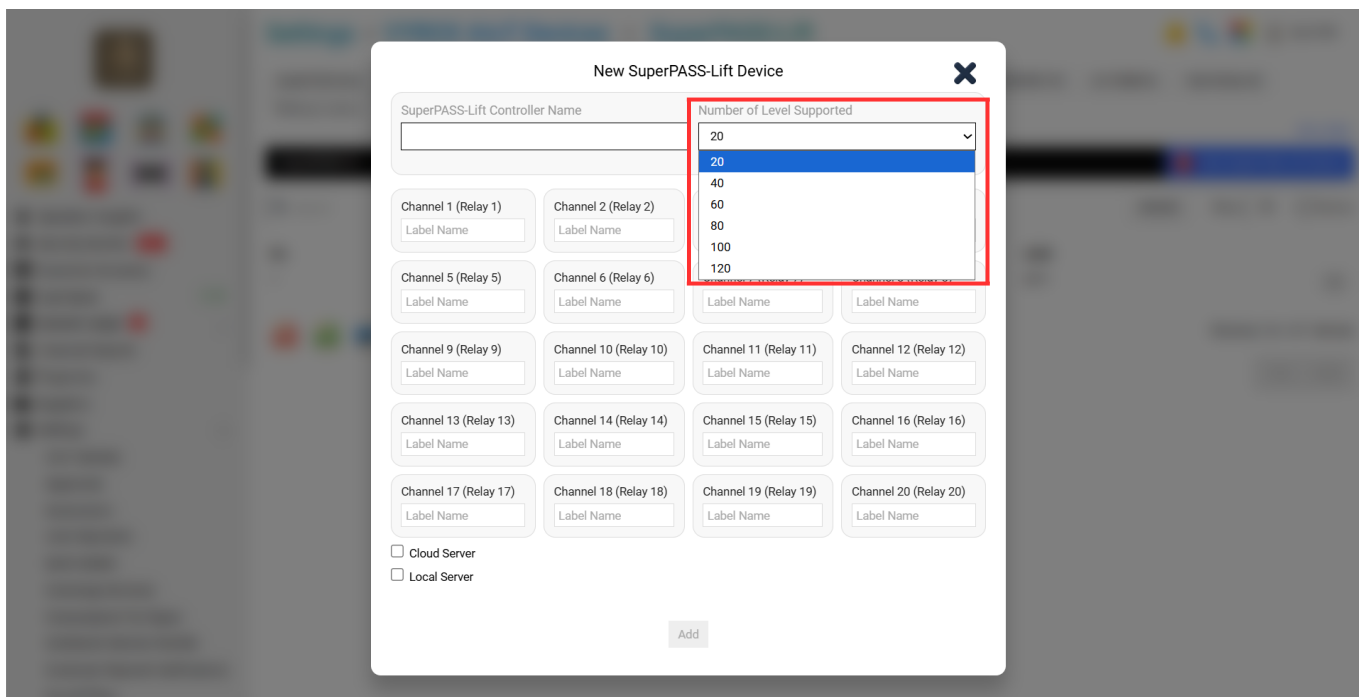


Step 3:

Fill in the Blank “Label Name in Channel”

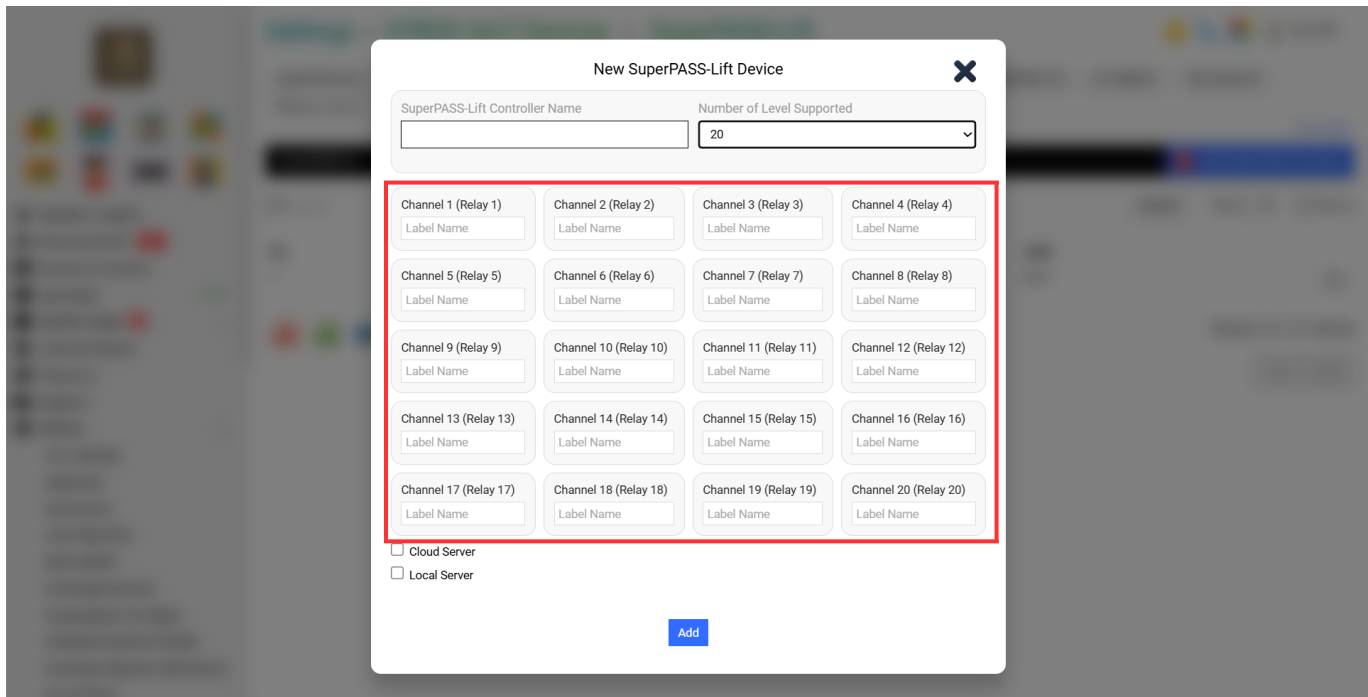


Step 4: Tick Cloud Server and Fill in the blank “Cloud Server API Key & SuperPASS-Door Controller Serial Number”.

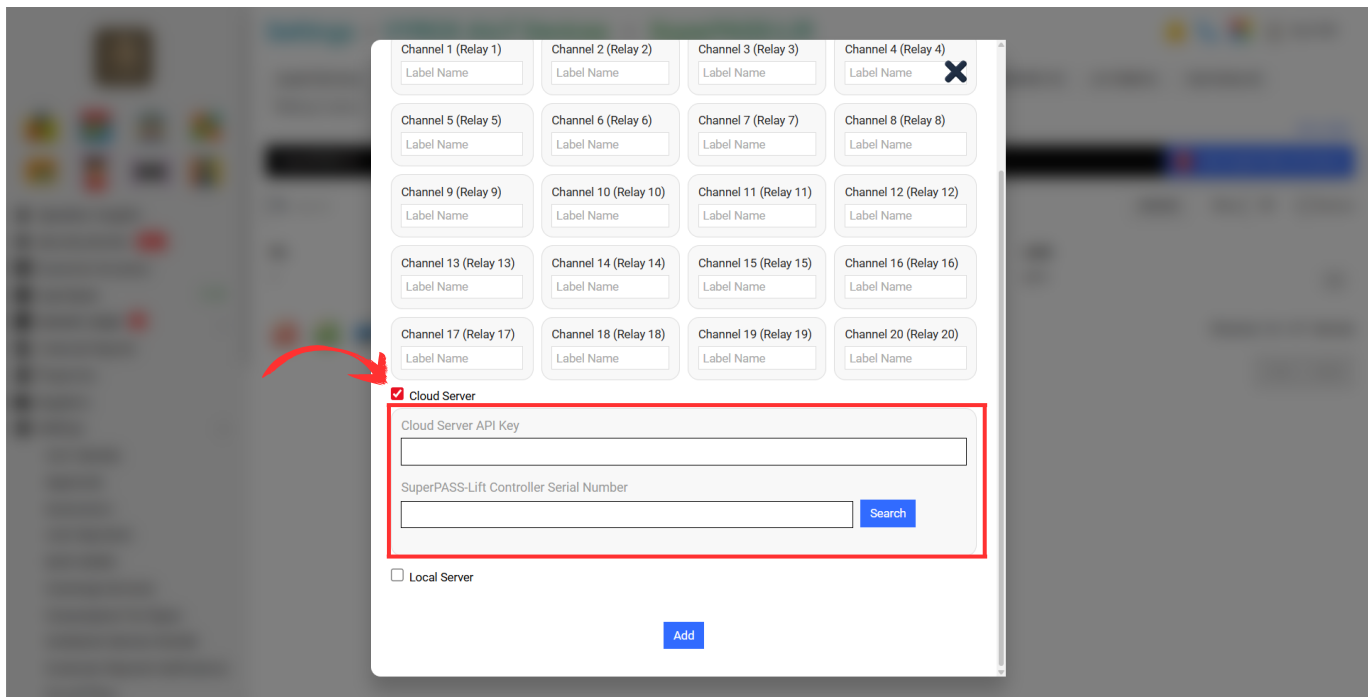

After done keying in all information, Click “Add”

1.3 SuperPass Face

Go to **Setting > AIoT Devices > SuperPASS-Face**

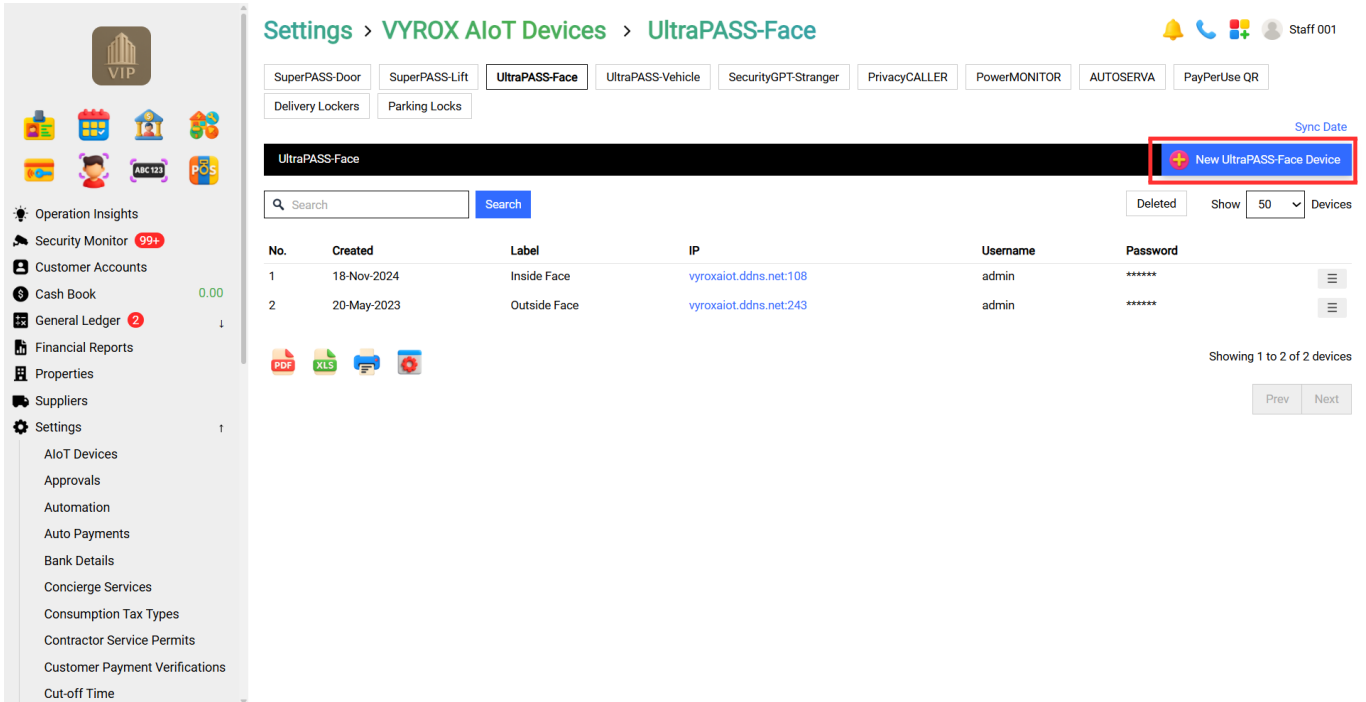


Details include:

- 1. SuperPass-Face Controller Name
- 2. Access Direction
- 3. Server IP
- 4. Server Port
- 5. Username & Password


Step 1:

Fill in blank **“SuperPass-Face Controller Name”**

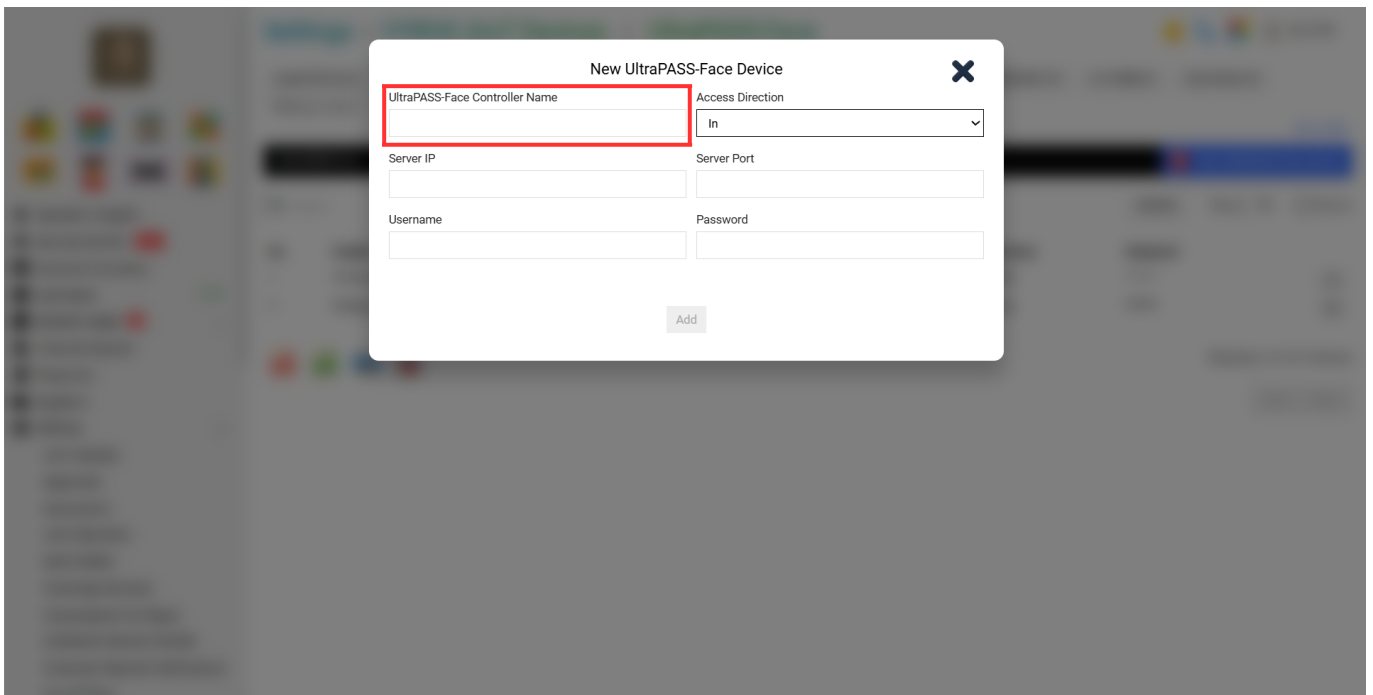


Step 2:

Select "Access Direction"

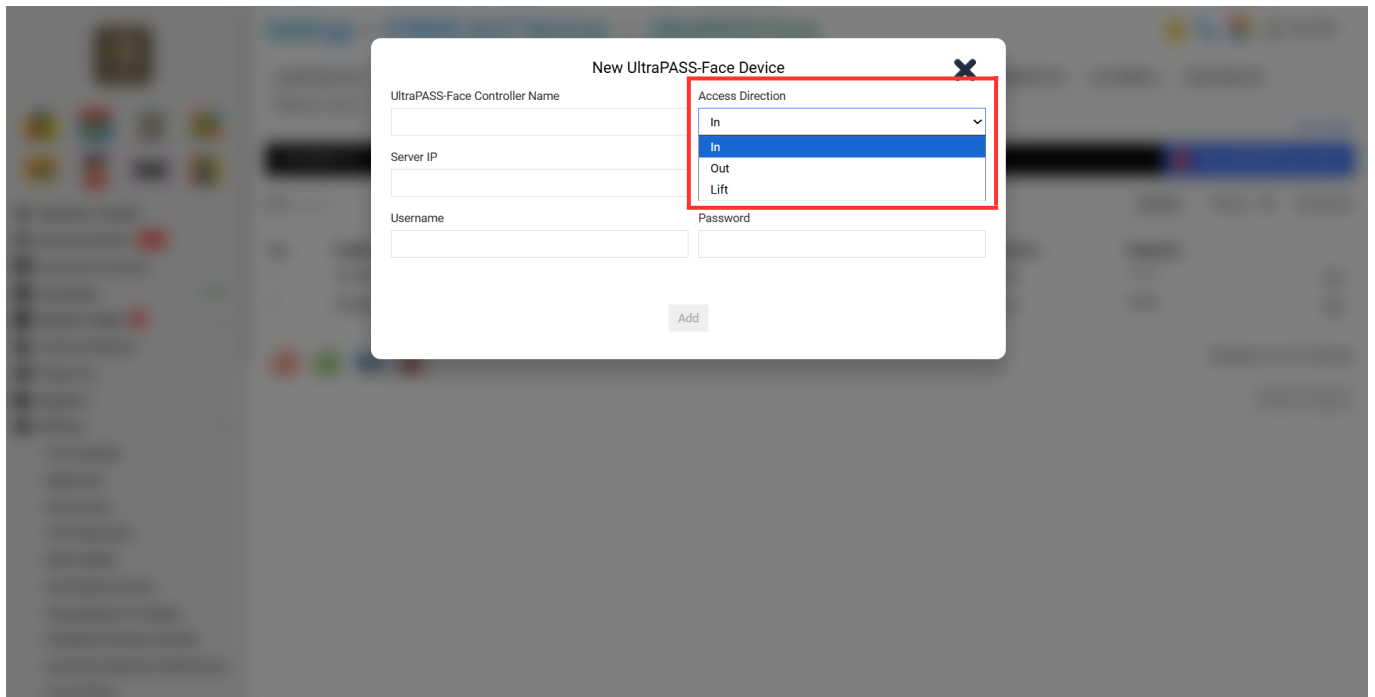


Step 3:

Fill in the Blank "Server IP & Server Port"

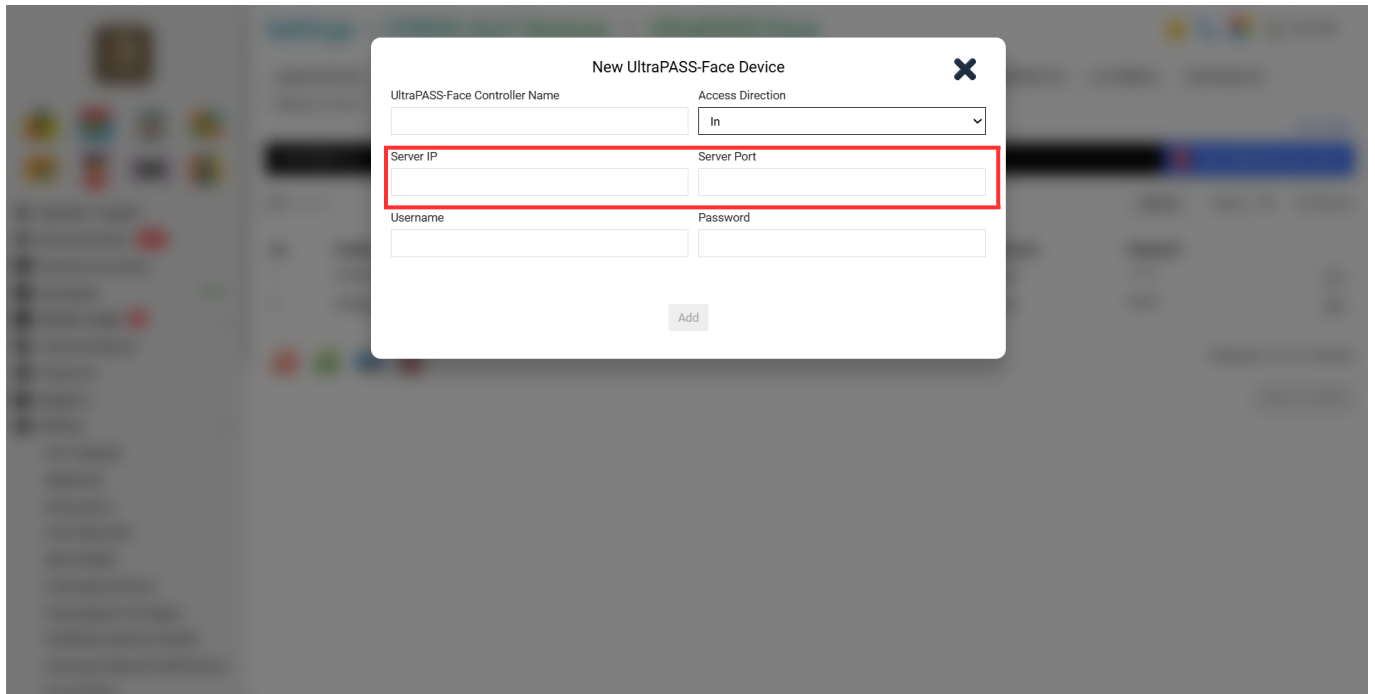


Step 4: Fill in the blank "Username & Password".

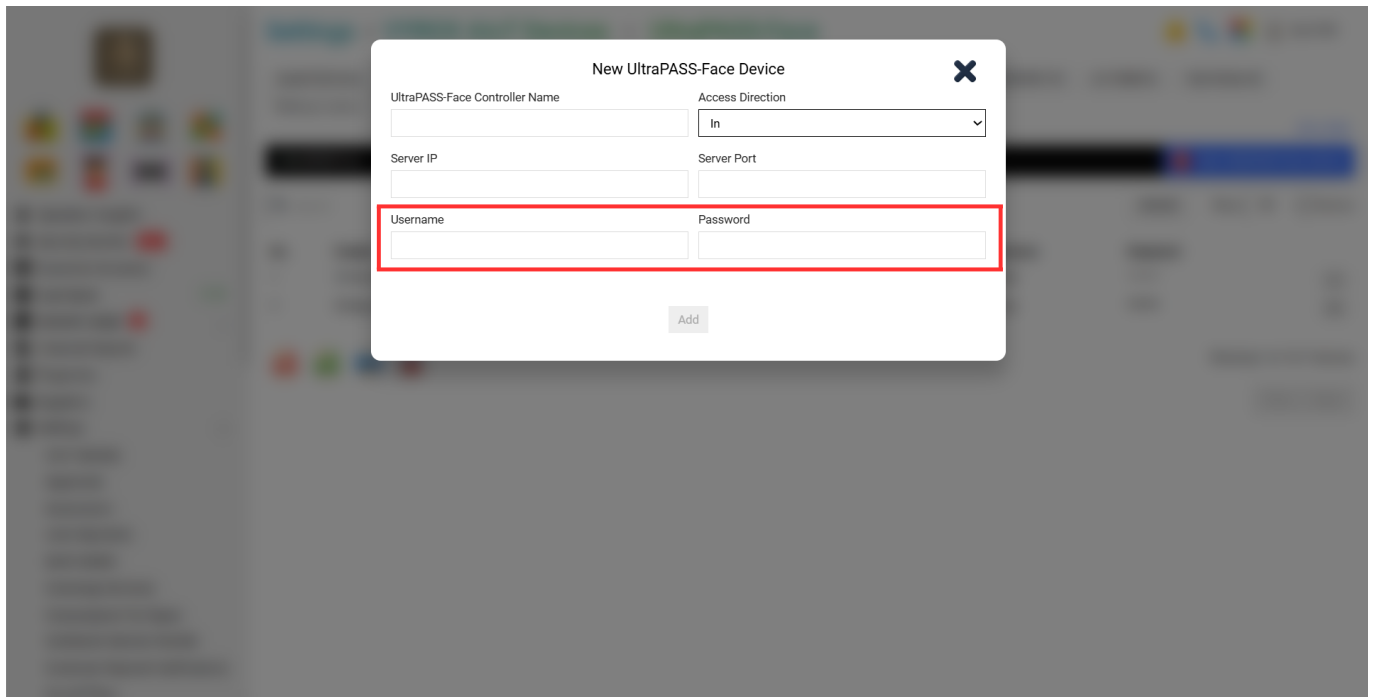

After done keying in all information, Click “Add”

1.4 SuperPass Vehicle

Go to **Setting > AIoT Devices > SuperPAss Vehicle**

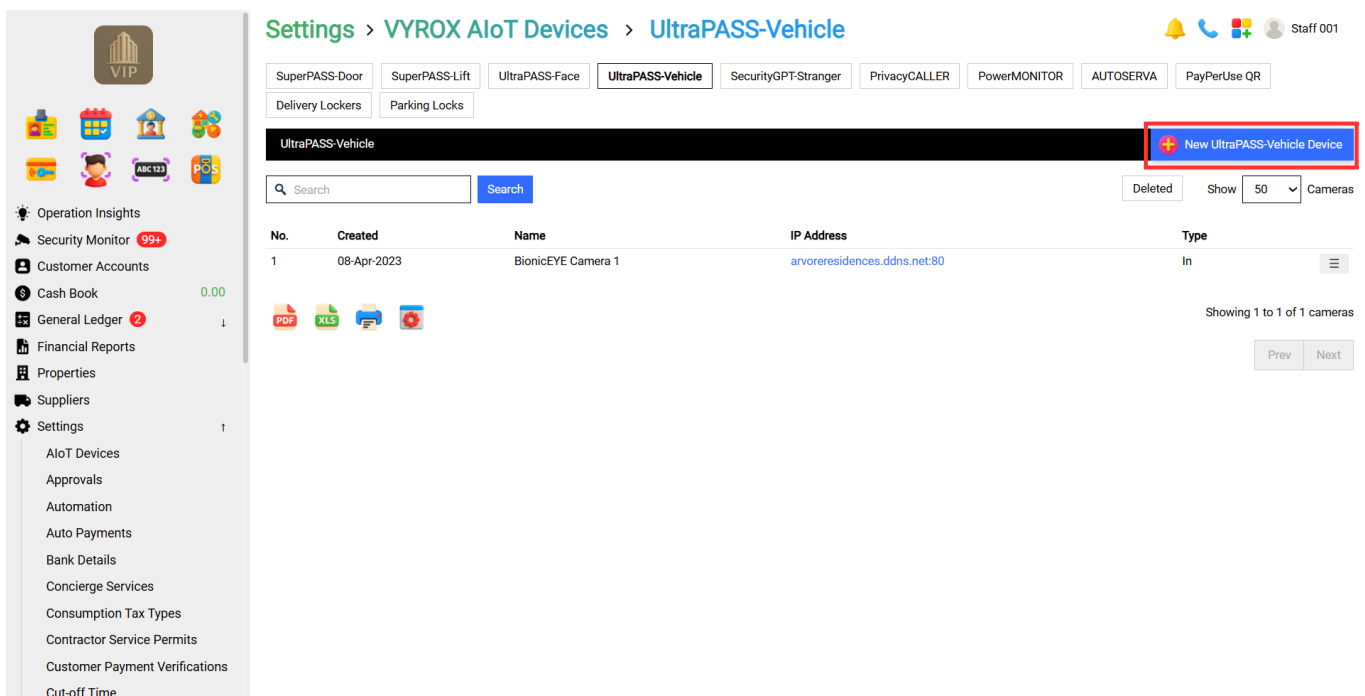


Details include:

1. IP Camera Name
2. Access Direction
3. IP Address & Port
4. Server Port
5. Username & Password


Step 1:

Fill in blank **“IP Camera Name”**

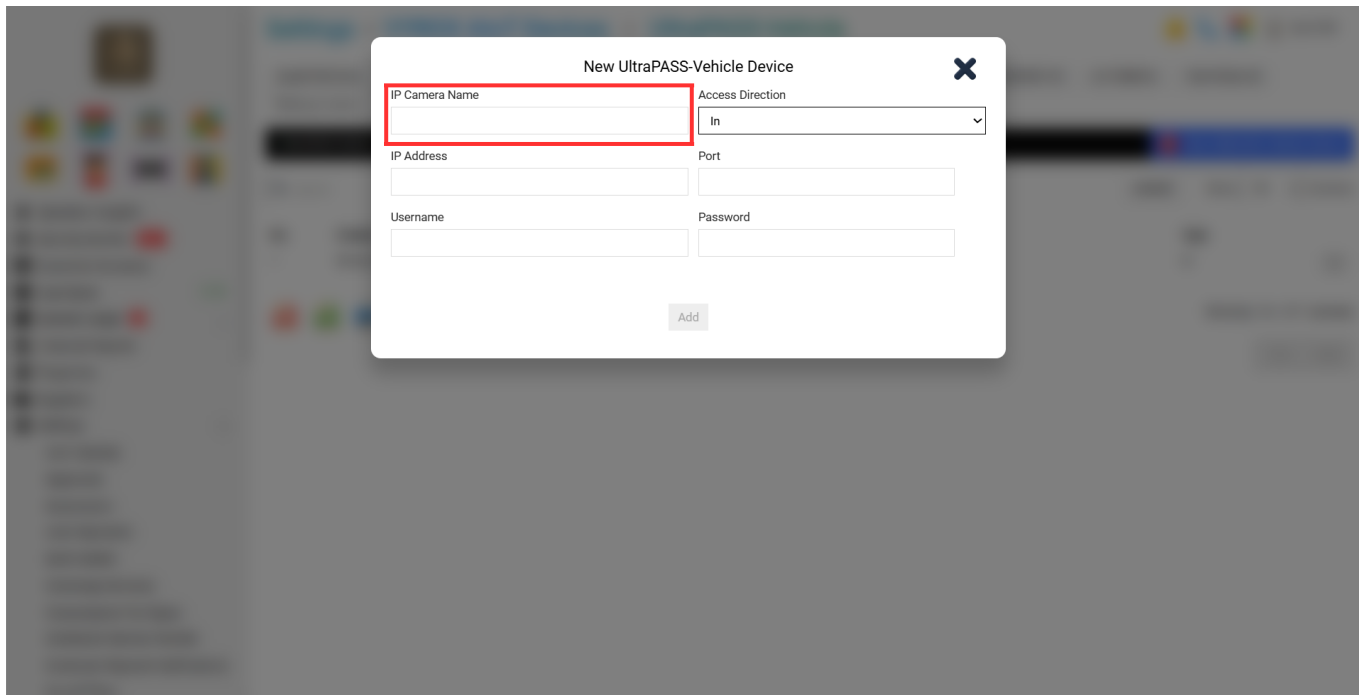


Step 2:

Select **“Access Direction”**

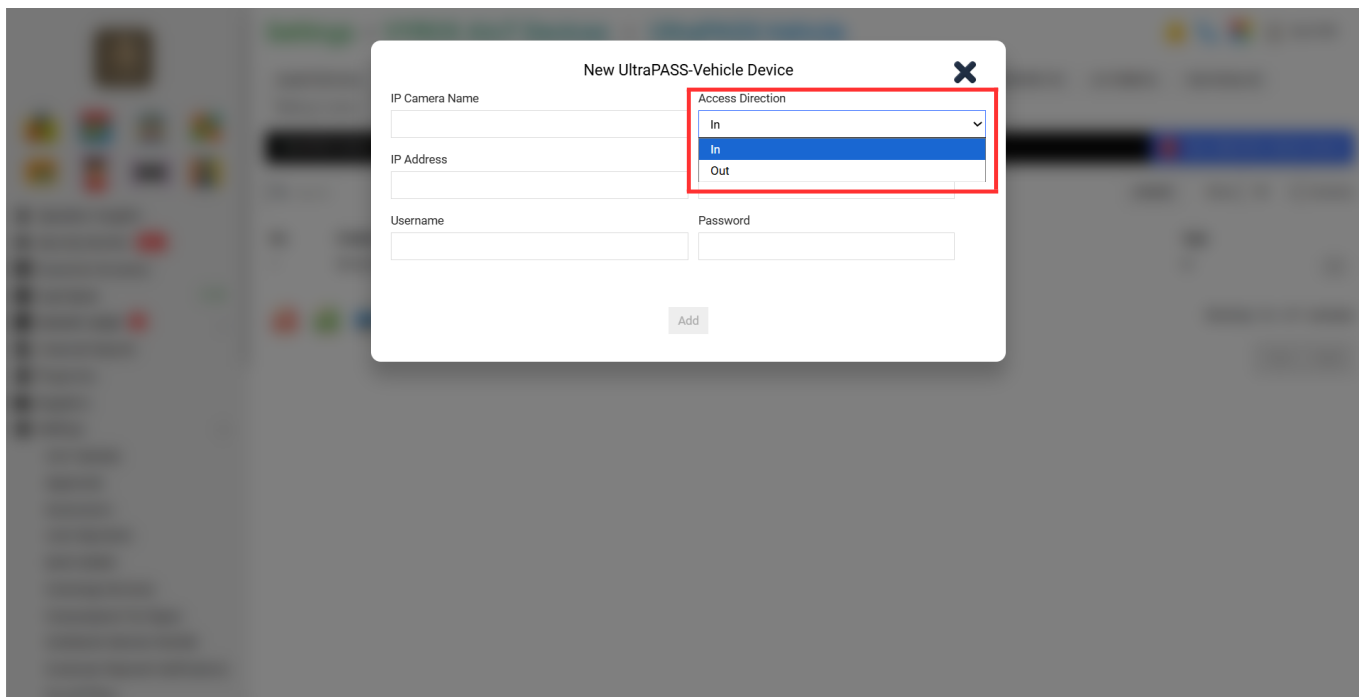


Step 3:

Fill in the Blank **“IP Address & Port”**

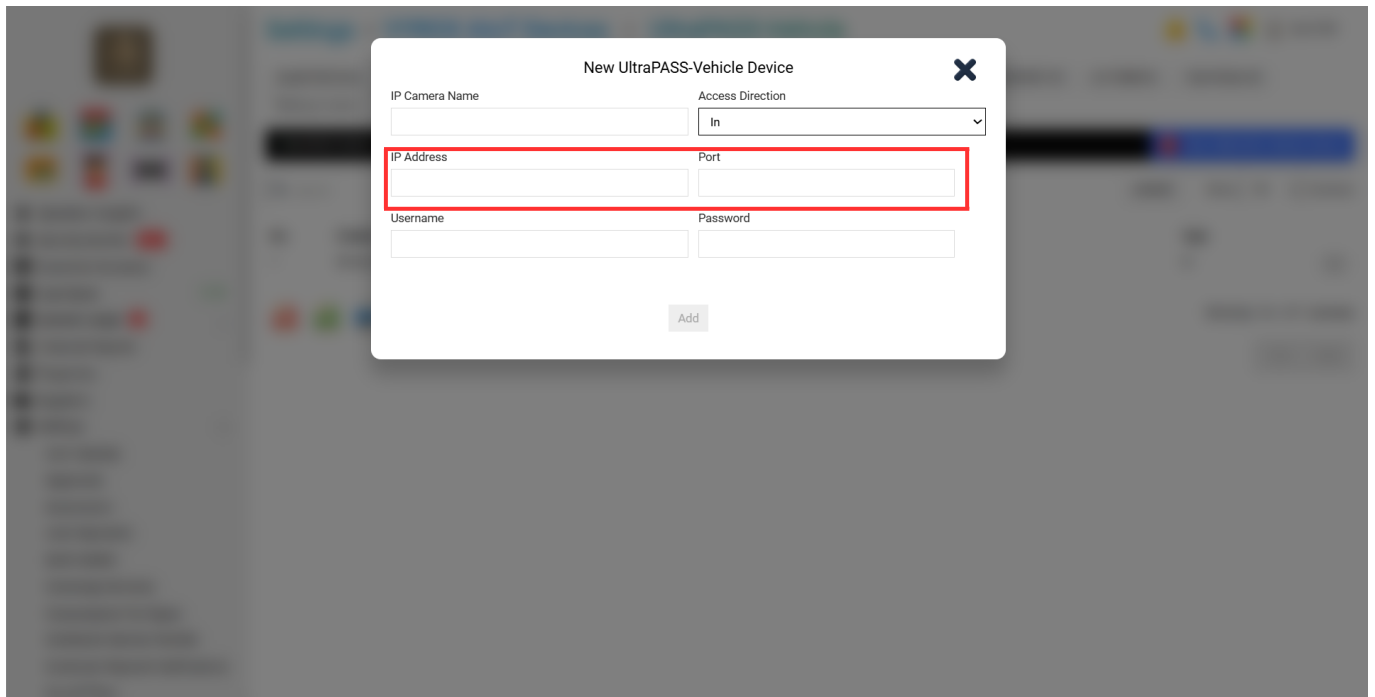

Step 4: Fill in the blank "Username & Password".

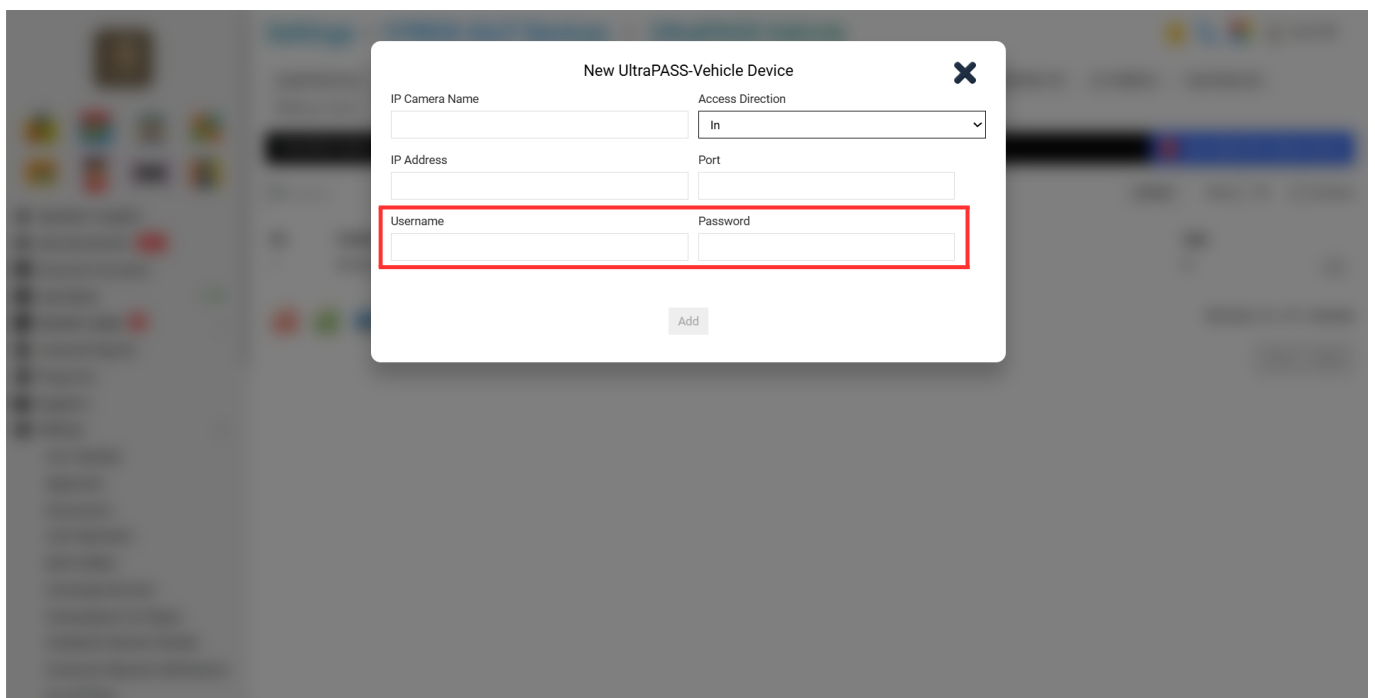

After done keying in all information, Click "Add"

From:
<https://www.vyrox.com/wiki/> - **VYROX Wiki**

Permanent link:
https://www.vyrox.com/wiki/doku.php?id=access_control_system&rev=1755849158

Last update: **2025/08/22 07:52**

