

# Face Access Control

## 1. Introduction


A thorough procedure for using the Face Access Control system is described in this tutorial. Find out how to create a fresh face profile for every unit. Find out how to fix registration issues and activate and deactivate face access. Examine the security measures used to safeguard biometric information. The management of Face Access Control is explained in this lesson. To provide each unit with easy and safe access, create a new face profile.

## 2. Set Up Face Access Control

This tutorial offers a thorough process for using the VYROX VIP Smart AIoT Devices, created by VYROX INTERNATIONAL SDN BHD, to optimise and improve building and facility operations. Property managers, building administrators, and facility operators may easily connect and operate the Face Access Control system with the help of VYROX's VIP AIoT tools, a full suite of intelligent solutions. These AIoT devices provide for improved security, more operational efficiency, and more intelligent decision-making by integrating hardware and software into a single, cohesive platform.

### 2.3 UltraPass Face

Go to **Setting > AIoT Devices > SuperPASS-Face**

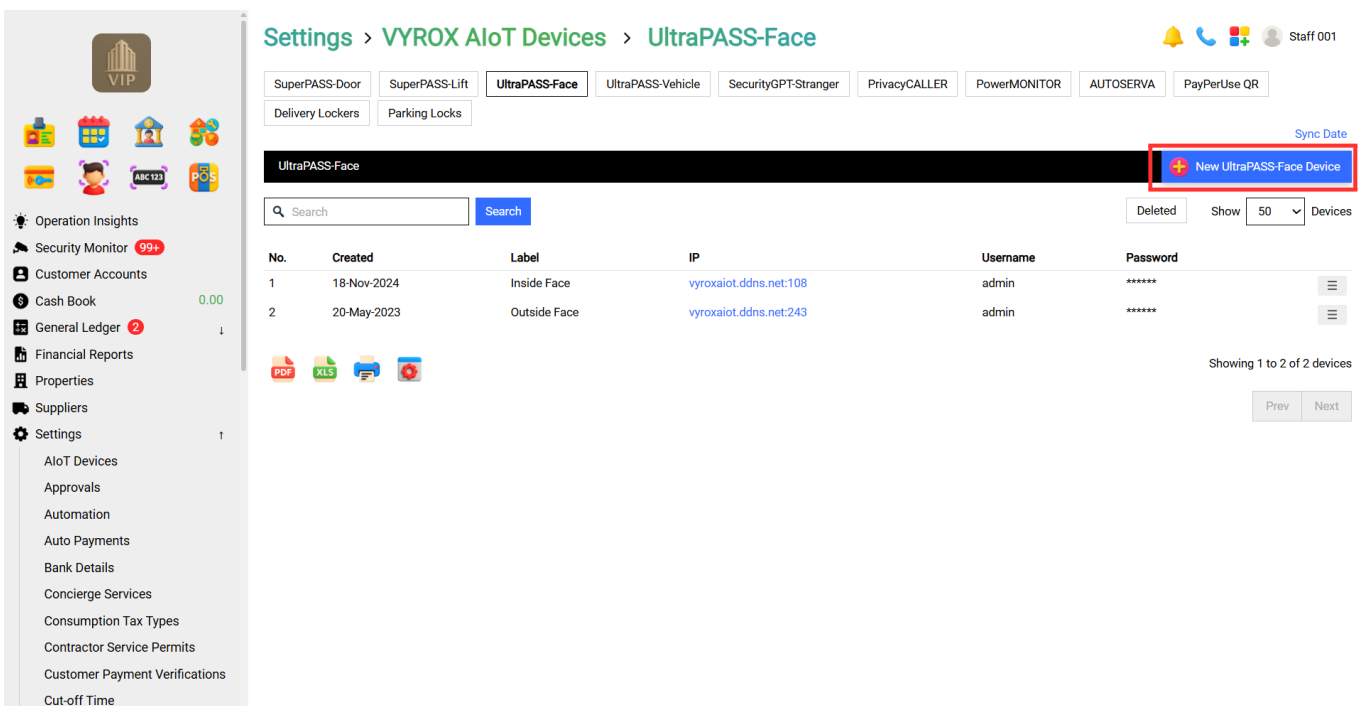


Details include:

1. SuperPass-Face Controller Name
2. Access Direction
3. Server IP
4. Server Port
5. Username & Password


**Step 1:**

Fill in blank **“SuperPass-Face Controller Name”**

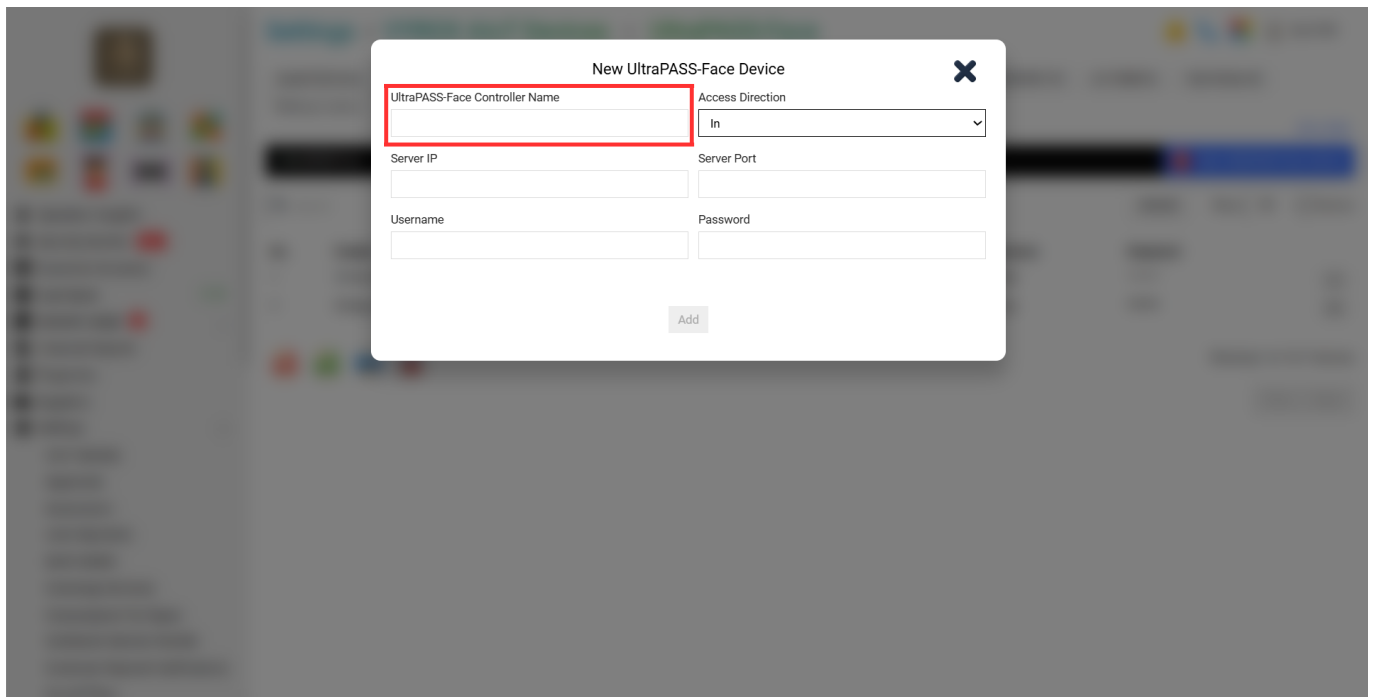


**Step 2:**

Select **“Access Direction”**

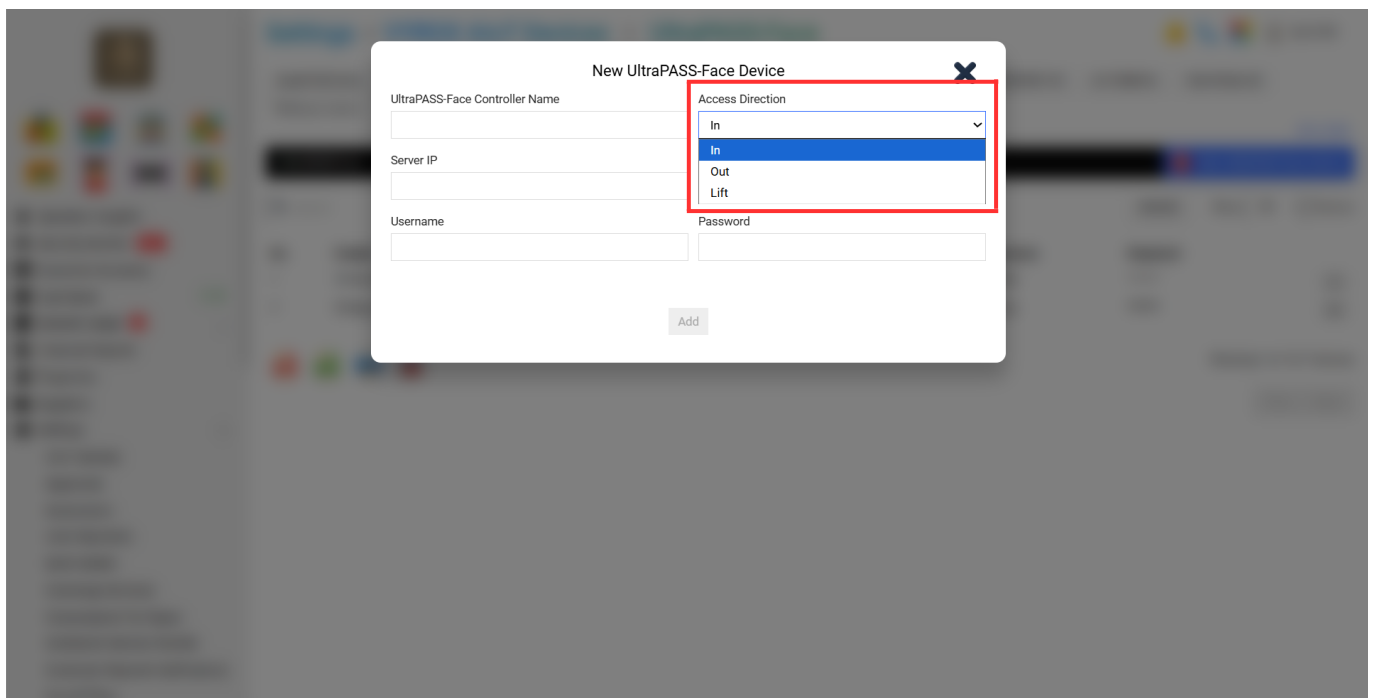


### Step 3:

Fill in the Blank **“Server IP & Server Port”**

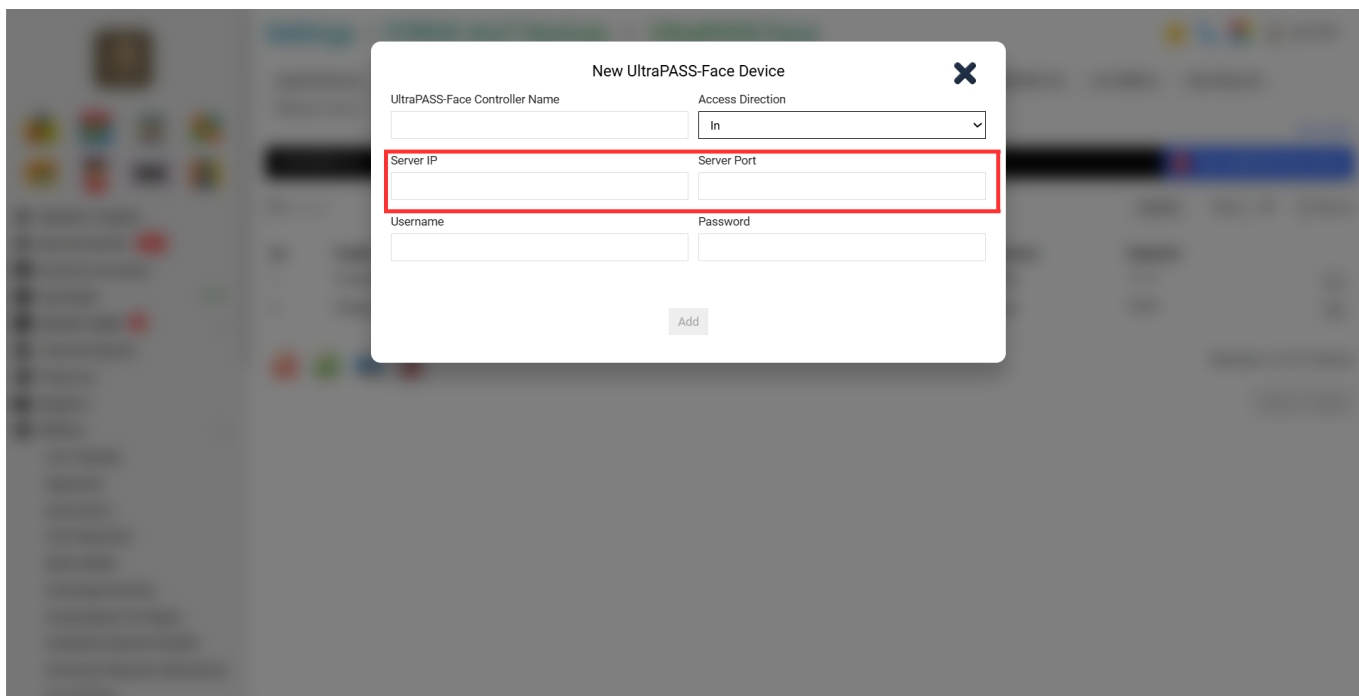

### Step 4: Fill in the blank **“Username & Password”**.

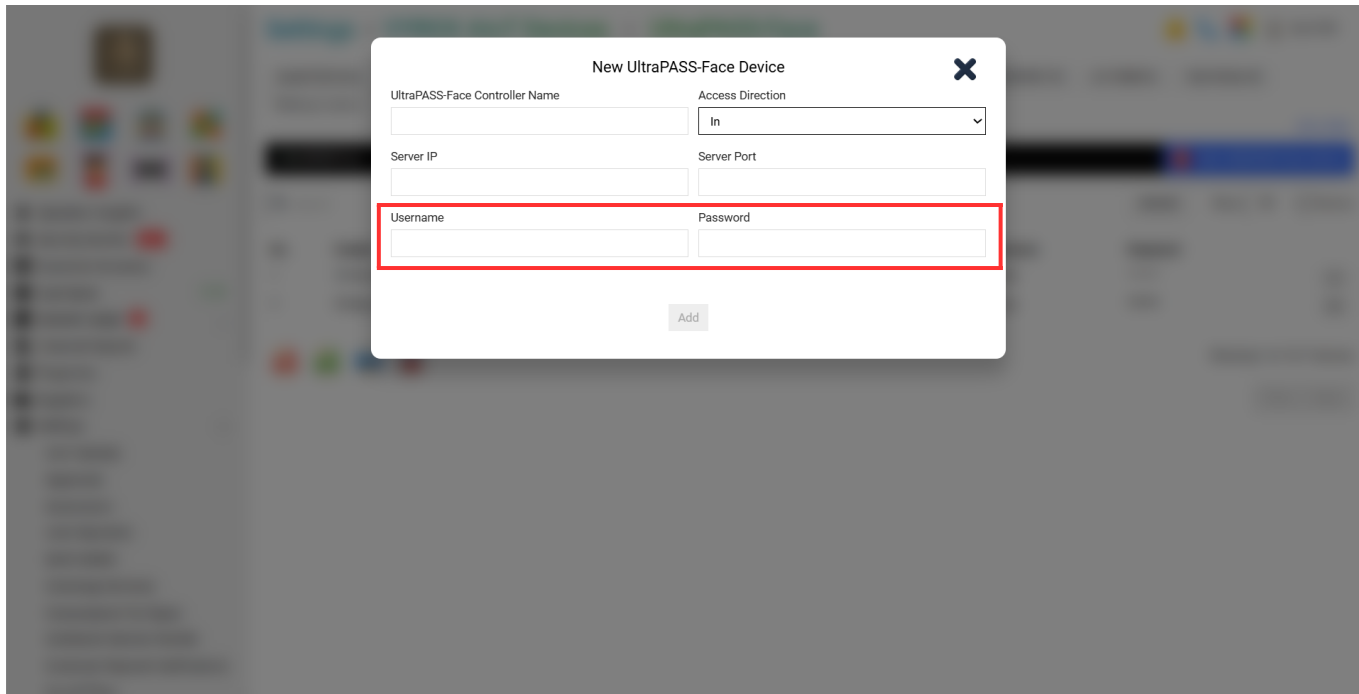

After done keying in all information, Click **“Add”**

## 2. Configuration Instructions for Properties

This guide shows you step-by-step how to set up the Properties Unit part of VYROX VIP Smart Integrated Property Management System, which was created by VYROX INTERNATIONAL SDN BHD.

Property managers, building officials, and facility workers can make and handle each unit, making sure that the information about each unit is always correct. Then, the UltraPass Face module for face recognition can be connected to each unit without any problems. This lets unit records be directly tied to safe and automated entry rights.

## 2.1 Configuration Properties


Go to **Properties > Units > Three Lines in the box.**

The screenshot shows the 'Properties > Units' configuration page in the PROSERVA system. The left sidebar contains various navigation options, with 'Properties' selected. The main area displays a table of units. A red box highlights the three-line menu icon in the rightmost column of the table, which is used to access configuration options for each unit.

No.	Created	Property No.	Size (ft <sup>2</sup> )	Share Unit	Reserved Parking Lots	Non-Reserved Parking Lots	Number of Bedrooms	Number of Bathrooms	
1	25-Feb-2025	A-1-1	0	91	2	0	0	0	☰
2	25-Feb-2025	A-1-2	0	105	2	0	0	0	☰
3	25-Feb-2025	A-1-3	0	67	1	0	0	0	☰
4	25-Feb-2025	A-1-4	0	89	1	0	0	0	☰
5	25-Feb-2025	A-1-5	0	67	1	0	0	0	☰
6	25-Feb-2025	A-1-6	0	89	1	0	0	0	☰
7	25-Feb-2025	A-1-7	0	91	2	0	0	0	☰
8	25-Feb-2025	A-1-8	0	105	2	0	0	0	☰
9	25-Feb-2025	A-10-1	0	97	2	0	0	0	☰
10	25-Feb-2025	A-10-2	0	111	2	0	0	0	☰
11	25-Feb-2025	A-10-3	0	67	1	0	0	0	☰
12	25-Feb-2025	A-10-4	0	89	1	0	0	0	☰
13	25-Feb-2025	A-10-5	0	67	1	0	0	0	☰
14	25-Feb-2025	A-10-6	0	89	1	0	0	0	☰
15	25-Feb-2025	A-10-7	0	97	2	0	0	0	☰
16	25-Feb-2025	A-10-8	0	111	2	0	0	0	☰
17	25-Feb-2025	A-11-1	0	97	2	0	0	0	☰
18	25-Feb-2025	A-11-2	0	111	2	0	0	0	☰
19	25-Feb-2025	A-11-3	0	67	1	0	0	0	☰

### Step 1

Tick, "Default UltraPASS-Face Settings for Main and Sub User Accounts"

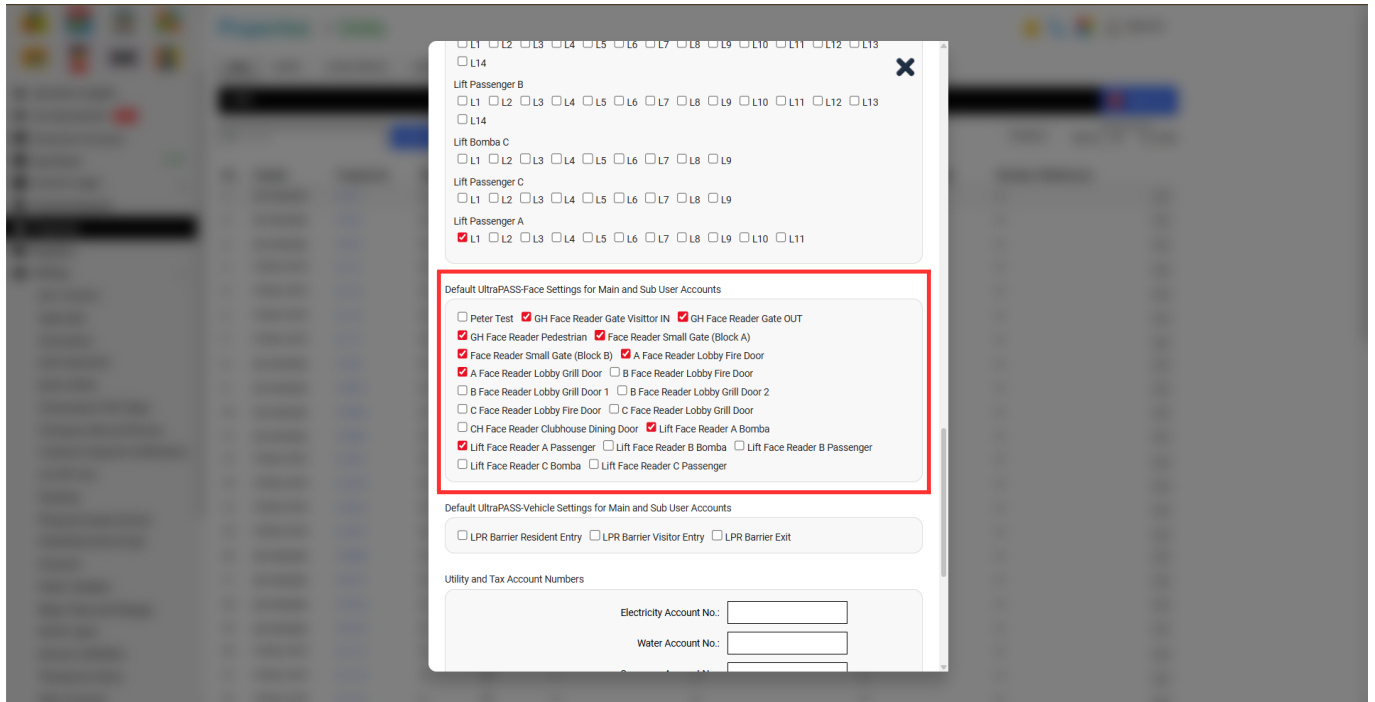

Note: Please tick which one the unit uses for door access.

From:

<https://www.vyrox.com/wiki/> - **VYROX Wiki**

Permanent link:

[https://www.vyrox.com/wiki/doku.php?id=face\\_access\\_control&rev=1756107045](https://www.vyrox.com/wiki/doku.php?id=face_access_control&rev=1756107045)

Last update: **2025/08/25 07:30**

